


1. Lead or GRP Tray
2. Polyroof pre-formed Right Angle Trim
3. Protec System

NOTES

A practical solution for this detail is to form a tray as shown below. The detail would normally be formed insitu from the lead, dressing the back upstand 'X' to the rear of the sill and the front flange 'Y' onto a Polyroof pre-formed Fillet Trim.

The detail can be formed from GRP trims, carefully joining with the Protec system.

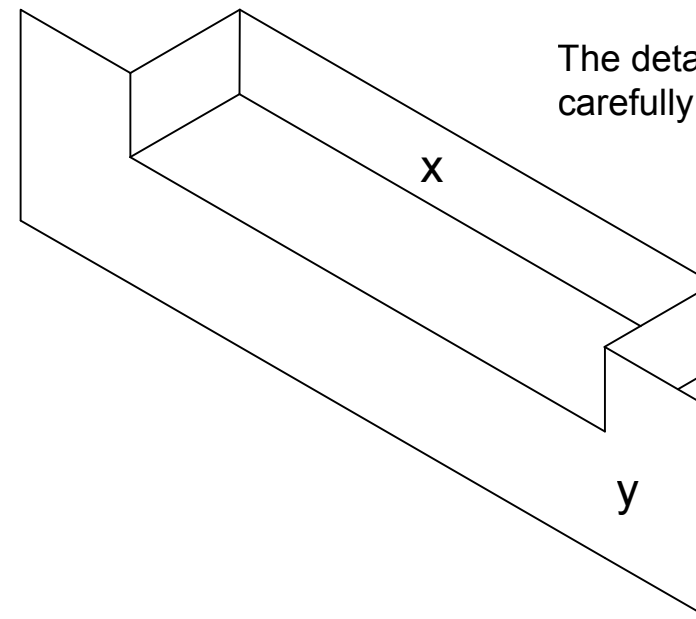

For further guidance please contact Polyroof Technical Services.



Title: Door Opening Detail

System: Protec

Ref: 3.24

Scale: NTS
(Do Not Scale From Drawing)

Drawn: OM

Date: 10/05/16